

### TABLE OF CONTENTS

### **SW EW BYPASS GIRT DETAILS**

CC0006 - LAPPED GIRT DETAIL

CC0011 - SINGLE CEE COLUMN AT BYPASS GIRTS

CC0012 - SINGLE CEE COLUMN AT BYPASS GIRTS

CC0072 - HR CEE GIRTS WITH CLIP ABOVE

CC0074 - GIRT TO JOIST CONNECTION

CC0075 - GIRT TO PURLIN CONN DETAIL

CC0076 - GIRT TO MASONRY WALL DETAIL

CC0080 - MASONRY AT LEFT OF COLUMN (ZEE OR CEE GIRT)

CC0090 - MASONRY AT RIGHT OF COLUMN (ZEE OR CEE GIRT)

CC0100 - MASONRY AT LEFT OF COLUMN (CEE GIRT)

CC0110 - MASONRY AT RIGHT OF COLUMN (CEE GIRT)

CC0120 - MASONRY AT LEFT OF COLUMN (HOT-ROLLED GIRT)

CC0130 - MASONRY AT RIGHT OF COLUMN (HOT-ROLLED GIRT)

CC0240 - SW OR EW GIRT DETAIL

CC0250 - GIRT DETAIL AT INTERIOR COLUMN DETAIL

CC1010 - SW OR EW GIRT DETAIL

CC1020 - SW OR EW GIRT DETAIL

CC1030 - SW OR EW GIRT DETAIL


CC1040 - HR CEE WITH WELDED CLIP ABOVE



WALL SECONDARY

#### CC0006 - LAPPED GIRT DETAIL

Download the DWG file by clicking here.

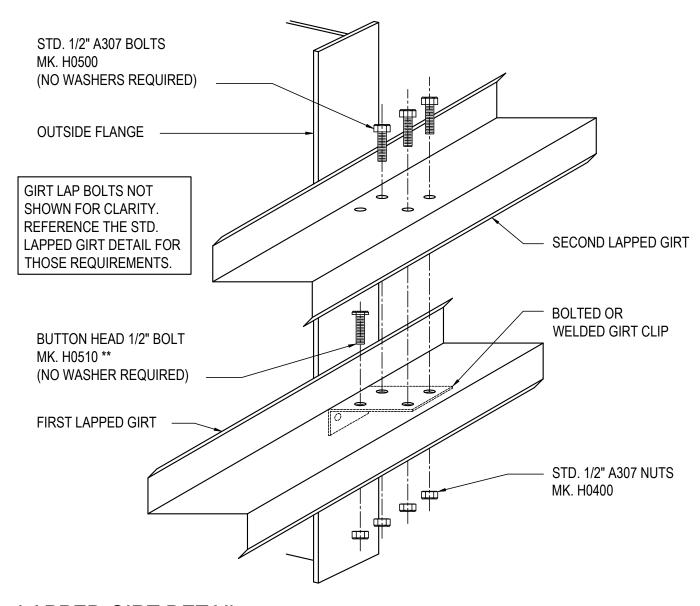

# LAPPED GIRT DETAIL

LAPPED GIRTS @ INTERIOR BAY COLUMNS

\*\* THE BUTTON HEAD 1/2" A307 BOLT MUST BE INSTALLED INTO THE FIRST GIRT AND CLIP OF A LAPPED CONDITION. THE BOLT/NUT ASSEMBLY MUST BE WRENCH TIGHT PRIOR TO THE SECOND LAPPED GIRT BEING INSTALLED.

CC0006

**Detailer Notes:** 

1) N/A

Issued: 08.16.19 (2018.017) CERTIFIED ERECTION DETAILS Detail Size (W x H): 1 x 1


Issued By: CAH




WALL SECONDARY

#### CC0011 - SINGLE CEE COLUMN AT BYPASS GIRTS

Download the DWG file by clicking here.

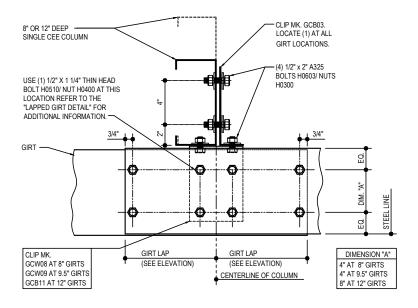

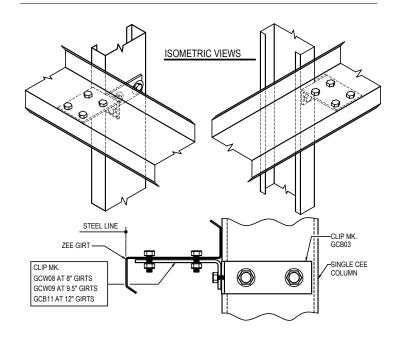

### SINGLE CEE COLUMN AT BYPASS GIRTS

SINGLE CEE COLUMN WITH LAPPED BYPASS GIRTS NOTE: USE (7) 1/2" x 1 1/4" A307 BOLTS H0500/NUTS H0400 WASHERS ARE NOT REQUIRED AT LAPPED ZEE CONNECTION REFERENCE ERECTOR NOTE FOR TYPICAL WASHER REQUIREMENTS CC0011

**Detailer Notes:** 

1) N/A


Revised : 11.22.22 (MR2022.12) **CERTIFIED ERECTION DETAILS** Detail Size (W x H): 2 x 1




WALL SECONDARY

#### CC0012 - SINGLE CEE COLUMN AT BYPASS GIRTS

Download the DWG file by clicking here.

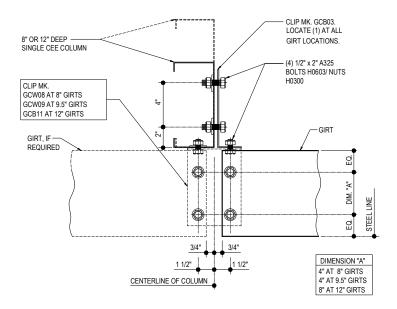

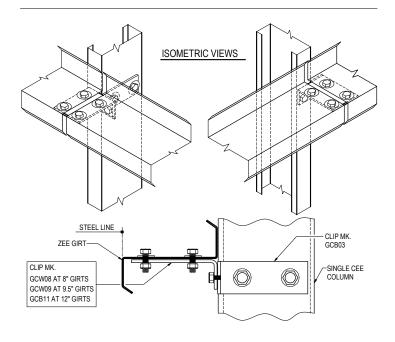

### SINGLE CEE COLUMN AT BYPASS GIRTS

SINGLE CEE COLUMN WITH SIMPLE-SPAN BYPASS GIRTS NOTE: USE (4) 1/2" x 1 1/4" A307 BOLTS H0500/NUTS H0400 REFERENCE ERECTOR NOTE FOR TYPICAL WASHER REQUIREMENTS CC0012

**Detailer Notes:** 

1) N/A


Issued : 03.30.22 (MR2022.01) **CERTIFIED ERECTION DETAILS** Detail Size (W x H): 2 x 1



WALL SECONDARY

#### CC0072 - HR CEE GIRTS WITH CLIP ABOVE

Download the DWG file by clicking here.

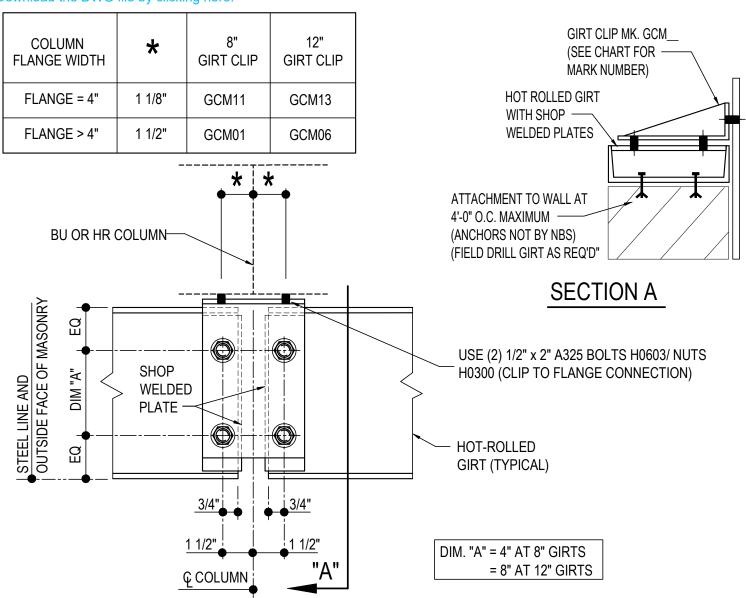

### NON SELF-SUPPORTING MASONRY

PARTIAL HEIGHT MASONRY (HOT-ROLLED GIRT ON TOP OF WALL) USE (4) 1/2"x2" A325 BOLTS (H0603) & NUTS (H0300) REFERENCE ERECTOR NOTE FOR TYPICAL WASHER REQUIREMENTS

CC0072

**Detailer Notes:** 

1) (2) HOLE CLIP WELDED TO HR GIRT:

8" - HCS08 12" - HCS12


Issued: 10.27.20 (MR2020.011) **CERTIFIED ERECTION DETAILS** Detail Size (W x H): 1 x 1 Issued By: WME



WALL SECONDARY

#### CC0074 - GIRT TO JOIST CONNECTION

Download the DWG file by clicking here.

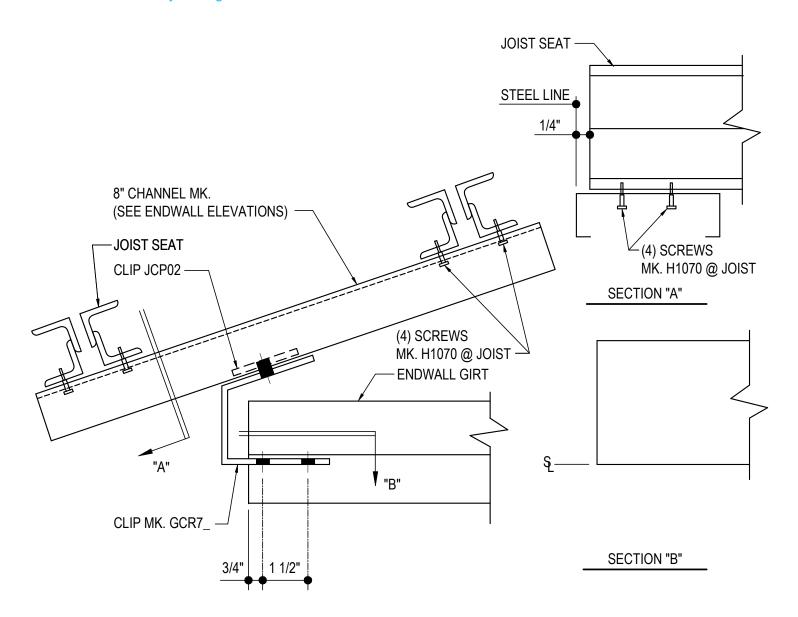

# GIRT TO JOIST CONNECTION

BY-PASS GIRT AT ENDWALL JOIST USE (4) 1/2" x 1 1/4" A307 BOLTS H0500/NUTS H0400 REFERENCE ERECTOR NOTE FOR TYPICAL WASHER REQUIREMENTS

CC0074

**Detailer Notes:** 

1) N/A


Revised : 03.16.23 (MR2023.04) CERTIFIED ERECTION DETAILS Detail Size (W x H) : 1 x 1



WALL SECONDARY

#### CC0075 - GIRT TO PURLIN CONN DETAIL

Download the DWG file by clicking here.

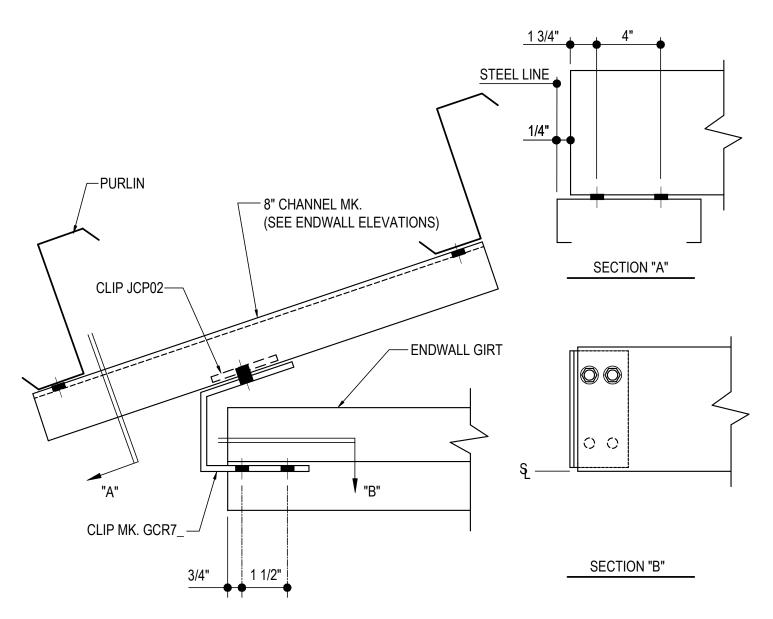

# GIRT TO PURLIN CONN

BYPASS GIRT AT ENDWALL PURLIN
USE (8) 1/2" x 1 1/4" A307 BOLTS H0500/NUTS H0400
REFERENCE ERECTOR NOTE FOR TYPICAL WASHER REQUIREMENTS

CC0075

**Detailer Notes:** 

1) N/A


Revised : 03.16.23 (MR2023.04) CERTIFIED ERECTION DETAILS Detail Size (W x H) : 1 x 1



WALL SECONDARY

#### CC0076 - GIRT TO MASONRY WALL DETAIL

Download the DWG file by clicking here.

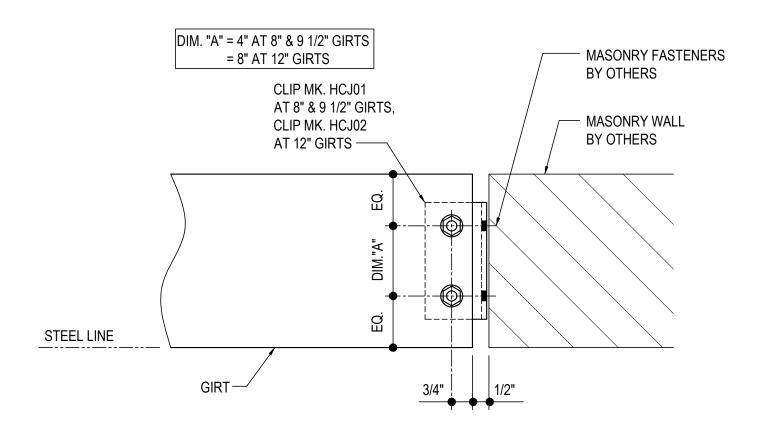

## GIRT TO MASONRY WALL DETAIL

NOTE: USE (2) 1/2 Ø x 1 1/4" A307 BOLTS H0500/NUTS H0400

CC0076

**Detailer Notes:** 

1) N/A


Revised: 08.10.21 (MR2021.09) CERTIFIED ERECTION DETAILS Detail Size (W x H): 1 x 1



WALL SECONDARY

### CC0080 - MASONRY AT LEFT OF COLUMN (ZEE OR CEE GIRT)

Download the DWG file by clicking here.

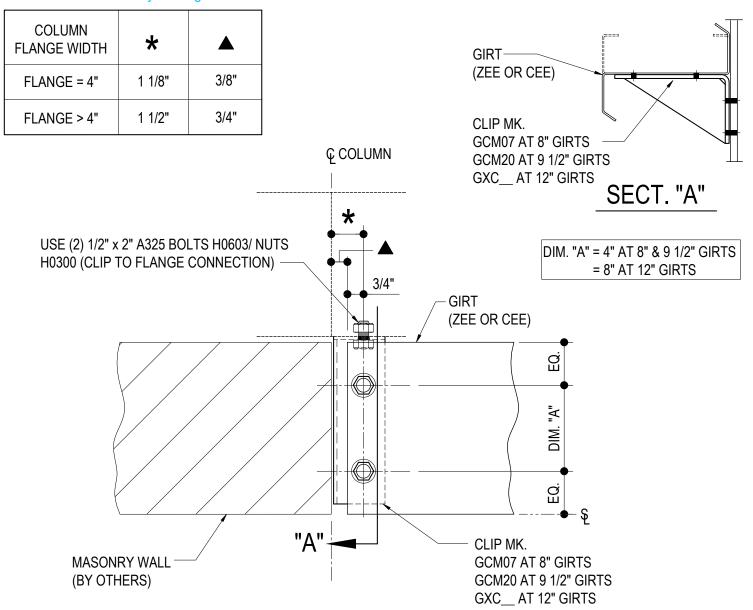

### SW OR EW GIRT TERMINATION DETAIL

BYPASS GIRT TERMINATION AT MASONRY WALL LEFT NOTE: USE (2) 1/2"x1 1/4" A307 BOLTS H0500/NUTS H0400 REFERENCE ERECTOR NOTE FOR TYPICAL WASHER REQUIREMENTS

CC0080

#### **Detailer Notes:**

1) IF COLUMN FLANGE IS 4" THE GCM\_\_ CLIP WILL CROSS THE CENTERLINE OF THE COLUMN SPECIAL CLIP MAY BE REQUIRED.


Issued : 06.20.23 (MR2023.07) CERTIFIED ERECTION DETAILS Detail Size (W x H) : 1 x 1



WALL SECONDARY

### CC0090 - MASONRY AT RIGHT OF COLUMN (ZEE OR CEE GIRT)

Download the DWG file by clicking here.

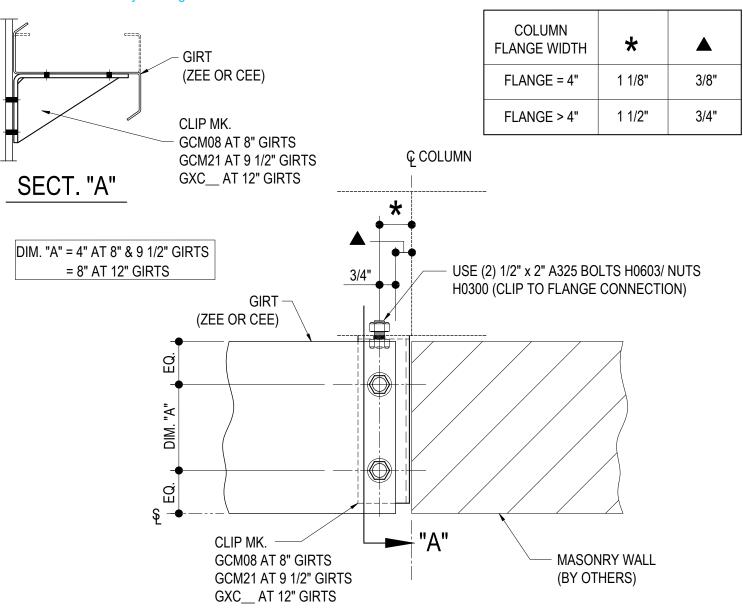

### SW OR EW GIRT TERMINATION DETAIL

BYPASS GIRT TERMINATION AT MASONRY WALL RIGHT NOTE: USE (2) 1/2"x 1 1/4" A307 BOLTS H0500/NUTS H0400 REFERENCE ERECTOR NOTE FOR TYPICAL WASHER REQUIREMENTS

CC0090

#### **Detailer Notes:**

1) IF COLUMN FLANGE IS 4" THE GCM\_\_ CLIP WILL CROSS THE CENTERLINE OF THE COLUMN SPECIAL CLIP MAY BE REQUIRED.


Issued : 06.20.23 (MR2023.07) CERTIFIED ERECTION DETAILS Detail Size (W x H) : 1 x 1



**WALL SECONDARY** 

### CC0100 - MASONRY AT LEFT OF COLUMN (CEE GIRT)

Download the DWG file by clicking here.

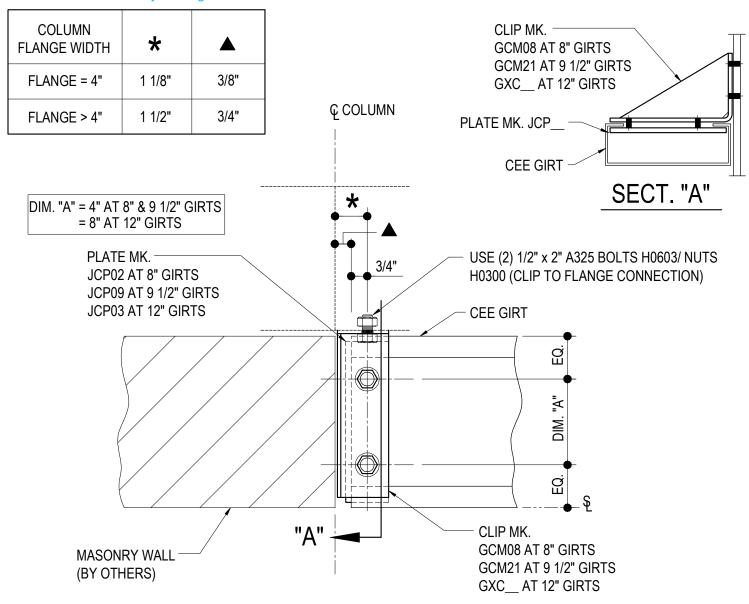

## SW OR EW GIRT TERMINATION DETAIL

BYPASS CEE GIRT TERMINATION AT MASONRY WALL LEFT NOTE: USE (2) 1/2"x 1 1/4" A307 BOLTS H0500/ NUTS H0400 REFERENCE ERECTOR NOTE FOR TYPICAL WASHER REQUIREMENTS

CC0100

### **Detailer Notes:**

1) IF COLUMN FLANGE IS 4" THE GCM $\_$  CLIP WILL CROSS THE CENTERLINE OF THE COLUMN SPECIAL CLIP MAY BE REQUIRED.


Issued : 03.22.22 (MR2022.01) CERTIFIED ERECTION DETAILS Detail Size (W x H) : 1 x 1



WALL SECONDARY

### CC0110 - MASONRY AT RIGHT OF COLUMN (CEE GIRT)

Download the DWG file by clicking here.

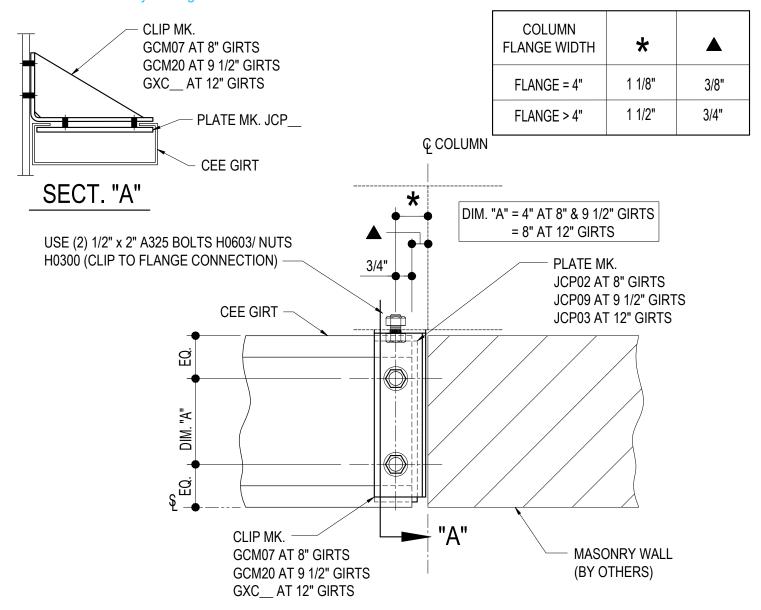

## SW OR EW GIRT TERMINATION DETAIL

BYPASS CEE GIRT TERMINATION AT MASONRY WALL RIGHT NOTE: USE (2) 1/2"x 1 1/4" A307 BOLTS H0500/NUTS H0400 REFERENCE ERECTOR NOTE FOR TYPICAL WASHER REQUIREMENTS

CC0110

#### **Detailer Notes:**

1) IF COLUMN FLANGE IS 4" THE GCM $\_$  CLIP WILL CROSS THE CENTERLINE OF THE COLUMN SPECIAL CLIP MAY BE REQUIRED.


Issued : 03.22.22 (MR2022.01) CERTIFIED ERECTION DETAILS Detail Size (W x H) : 1 x 1



WALL SECONDARY

### CC0120 - MASONRY AT LEFT OF COLUMN (HOT-ROLLED GIRT)

Download the DWG file by clicking here.

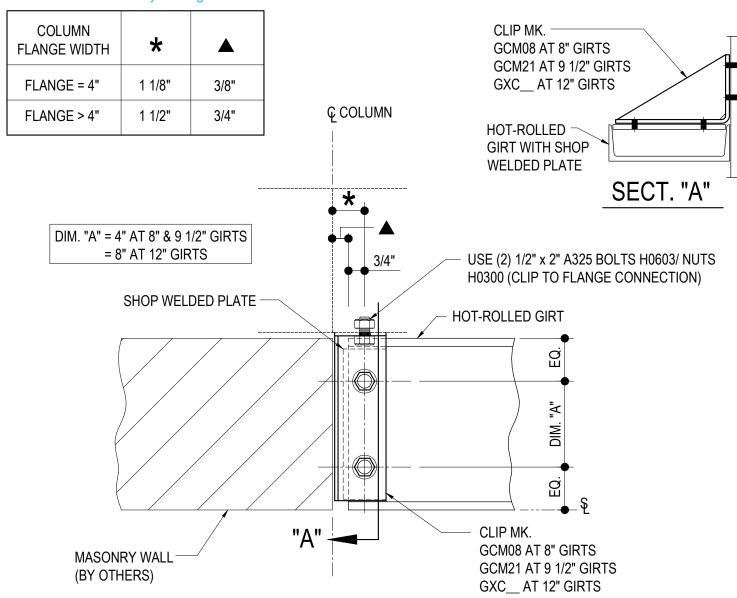

## SW OR EW GIRT TERMINATION DETAIL

BYPASS CEE GIRT TERMINATION AT MASONRY WALL LEFT NOTE: USE (2) 1/2"x 2" A325 BOLTS H0603/NUTS H0300 REFERENCE ERECTOR NOTE FOR TYPICAL WASHER REQUIREMENTS

CC0120

#### **Detailer Notes:**

1) IF COLUMN FLANGE IS 4" THE GCM $\_$  CLIP WILL CROSS THE CENTERLINE OF THE COLUMN SPECIAL CLIP MAY BE REQUIRED.


Issued : 03.22.22 (MR2022.01) CERTIFIED ERECTION DETAILS Detail Size (W x H) : 1 x 1



WALL SECONDARY

### CC0130 - MASONRY AT RIGHT OF COLUMN (HOT-ROLLED GIRT)

Download the DWG file by clicking here.

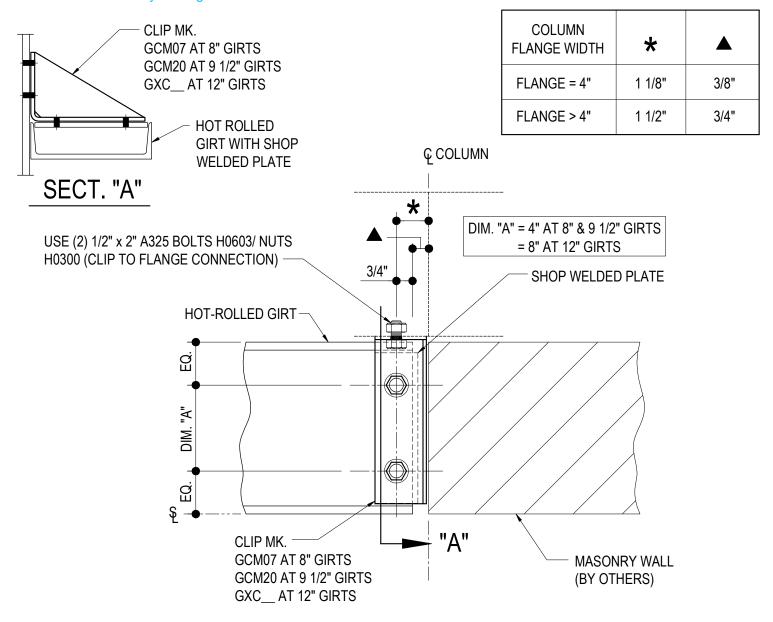

### SW OR EW GIRT TERMINATION DETAIL

BYPASS CEE GIRT TERMINATION AT MASONRY WALL RIGHT NOTE: USE (2) 1/2"x 2" A325 BOLTS H0603/NUTS H0300 REFERENCE ERECTOR NOTE FOR TYPICAL WASHER REQUIREMENTS

CC0130

#### **Detailer Notes:**

1) IF COLUMN FLANGE IS 4" THE GCM\_\_ CLIP WILL CROSS THE CENTERLINE OF THE COLUMN SPECIAL CLIP MAY BE REQUIRED.


Issued : 03.22.22 (MR2022.01) CERTIFIED ERECTION DETAILS Detail Size (W x H) : 1 x 1



WALL SECONDARY

#### CC0240 - SW OR EW GIRT DETAIL

Download the DWG file by clicking here.

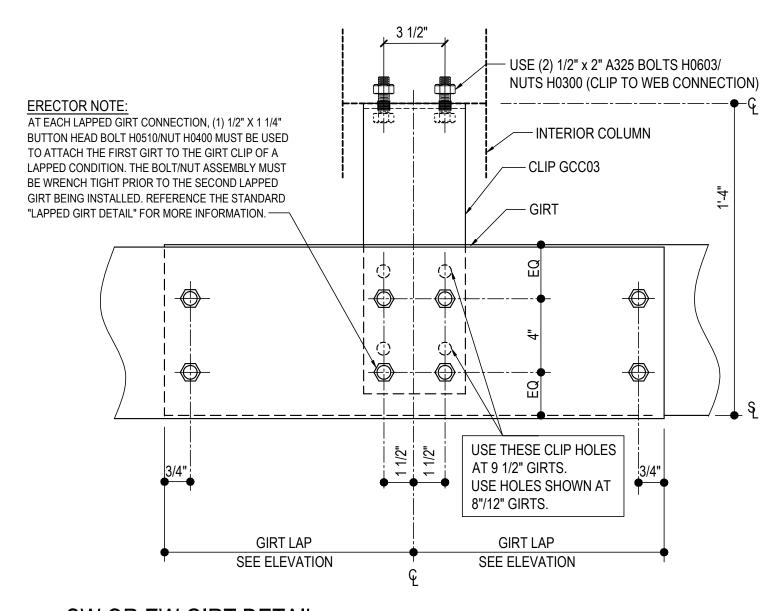

# SW OR EW GIRT DETAIL

LAPPED BYPASS GIRTS AT INTERIOR BAY COLUMNS

NOTE: USE (7) 1/2"x 1 1/4" A307 BOLTS H0500/NUTS H0400

WASHERS ARE NOT REQUIRED AT LAPPED ZEE CONNECTION

REFERENCE ERECTOR NOTE FOR TYPICAL WASHER REQUIREMENTS

CC0240

**Detailer Notes:** 

1) N/A


Revised : 11.22.22 (MR2022.12) CERTIFIED ERECTION DETAILS Detail Size (W x H) : 1 x 1



**WALL SECONDARY** 

#### CC0250 - GIRT DETAIL AT INTERIOR COLUMN DETAIL

Download the DWG file by clicking here.

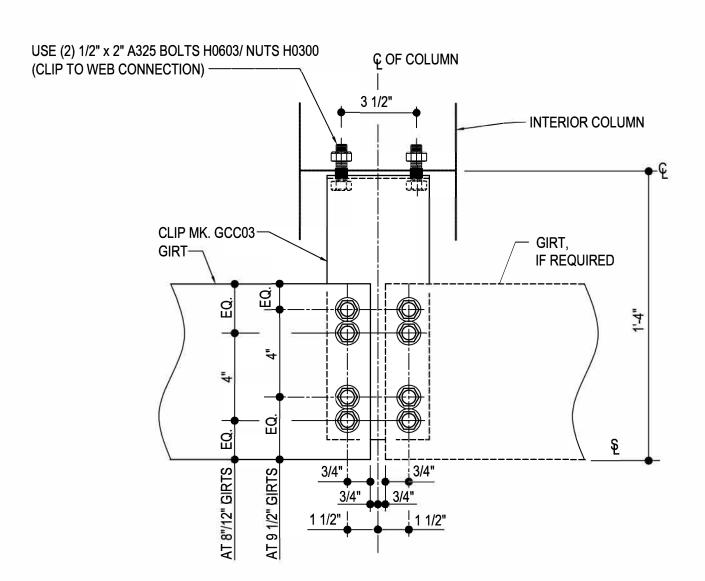

# GIRT DETAIL AT INTERIOR COLUMN

SIMPLE-SPAN GIRTS AT BUILT UP INTERIOR COLUMN NOTE: USE (4) 1/2" x 1 1/4" A307 BOLTS H0500/NUTS H0400 REFERENCE STANDARD WASHER DETAIL FOR TYPICAL WASHER REQUIREMENTS

CC0250

**Detailer Notes:** 

1) N/A

Issued: 08.16.19 (2018.017) CERTIFIED ERECTION DETAILS Detail Size (W x H): 1 x 1


Issued By: CAH



WALL SECONDARY

#### CC1010 - SW OR EW GIRT DETAIL

Download the DWG file by clicking here.

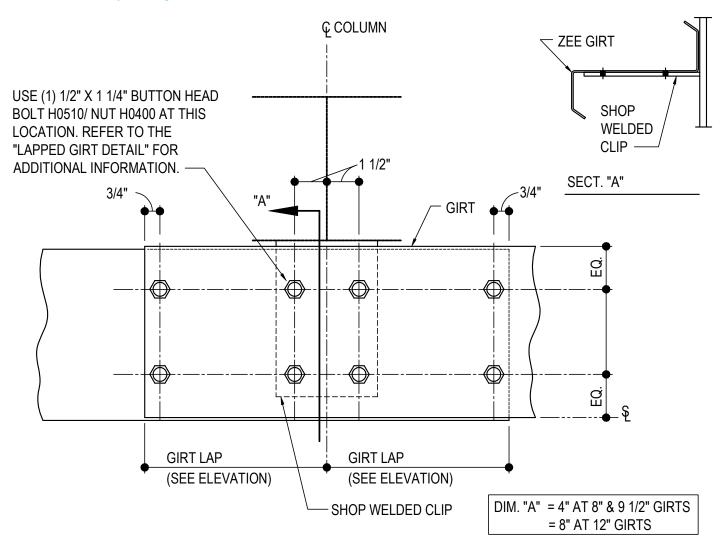

### SW OR EW GIRT DETAIL

LAPPED BYPASS GIRTS AT INTERIOR BAY COLUMNS NOTE: USE (7) 1/2"x 1 1/4" A307 BOLTS H0500/NUTS H0400 WASHERS ARE NOT REQUIRED AT LAPPED ZEE CONNECTION REFERENCE ERECTOR NOTE FOR TYPICAL WASHER REQUIREMENTS

CC1010

#### **Detailer Notes:**

1) SHOP WELDED BYPASS GIRT CLIP TO COLUMN: 8" GIRT = PCU01, 9 1/2" GIRT = GCB62, 12" GIRT = GCB12


Revised: 11.22.22 (MR2022.12) CERTIFIED ERECTION DETAILS Detail Size (W x H): 1 x 1



WALL SECONDARY

#### CC1020 - SW OR EW GIRT DETAIL

Download the DWG file by clicking here.

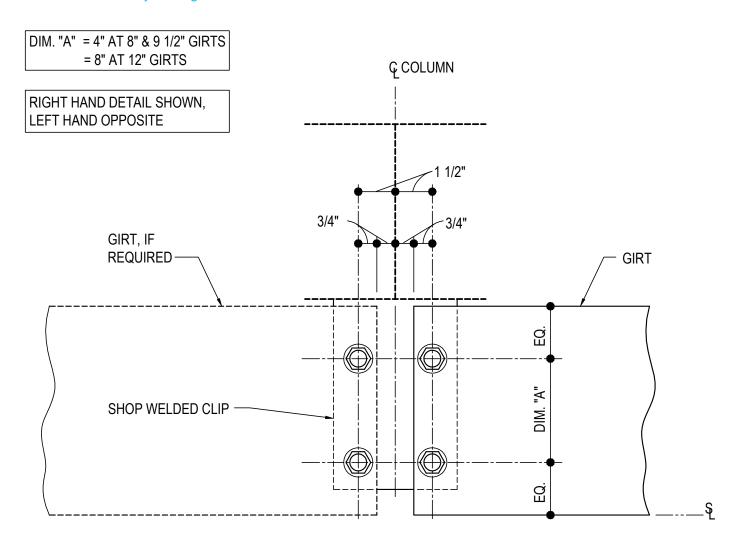

## SW OR EW GIRT DETAIL

SIMPLE-SPAN BYPASS GIRTS AT INTERIOR BAY COLUMNS NOTE: USE (4) 1/2"x 1 1/4" A307 BOLTS H0500/NUTS H0400 REFERENCE ERECTOR NOTE FOR TYPICAL WASHER REQUIREMENTS

CC1020

#### **Detailer Notes:**

1) SHOP WELDED BYPASS GIRT CLIP TO COLUMN: 8" GIRT = PCU01, 9 1/2" GIRT = GCB62, 12" GIRT = GCB12

Issued : 08.16.19 (2018.017) **CERTIFIED ERECTION DETAILS** Detail Size (W x H) : 1 x 1


Issued By: CAH



WALL SECONDARY

#### CC1030 - SW OR EW GIRT DETAIL

Download the DWG file by clicking here.

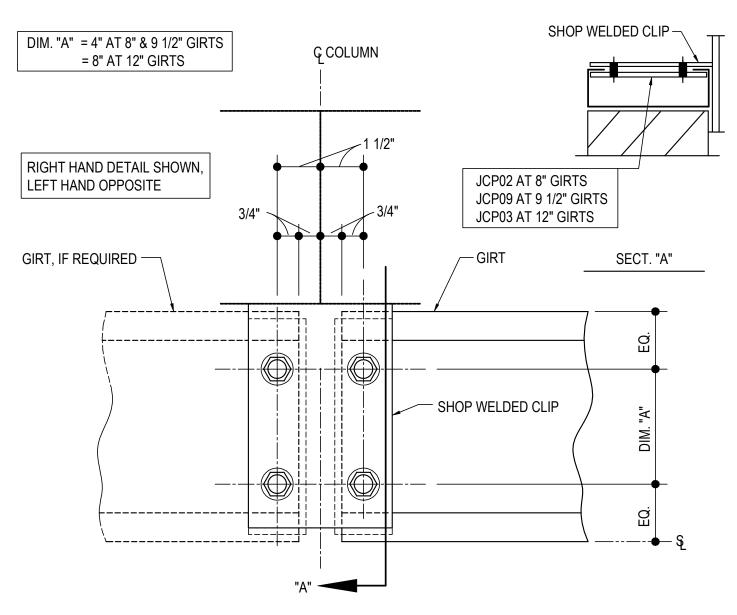

## SW OR EW GIRT DETAIL

BYPASS CEE GIRT AT MASONRY WALL

NOTE: USE (4) 1/2" x 1 1/4" A307 BOLTS H0500/NUTS H0400

REFERENCE ERECTOR NOTE FOR TYPICAL WASHER REQUIREMENTS

CC1030

### **Detailer Notes:**

1) SHOP WELDED BYPASS GIRT CLIP TO COLUMN: 8" GIRT = GCM04, 9 1/2" GIRT = GCM95, 12" GIRT = GCB12

Revised: 01.25.21 (MR2021.02) CERTIFIED ERECTION DETAILS Detail Size (W x H): 1 x 1


Revised By: SDF



WALL SECONDARY

#### CC1040 - HR CEE WITH WELDED CLIP ABOVE

Download the DWG file by clicking here.

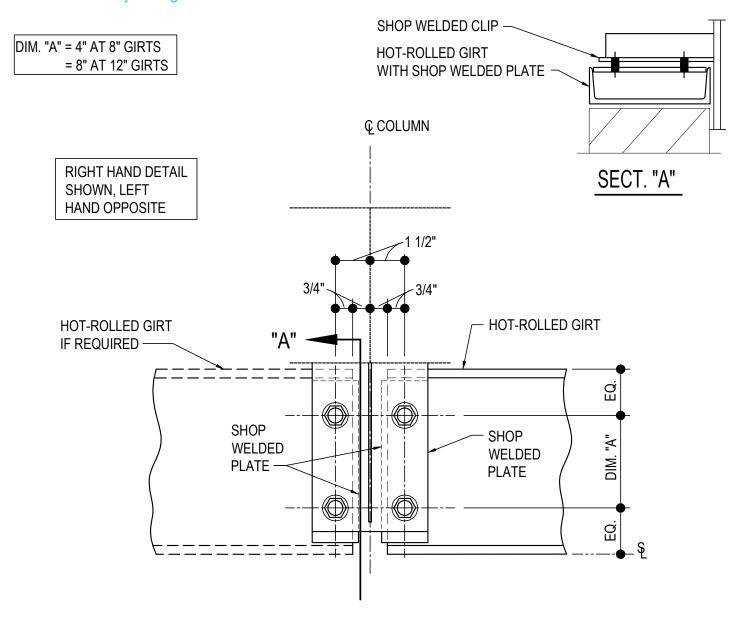

## SW OR EW GIRT DETAIL

BYPASS HOT-ROLLED AT MASONRY WALL NOTE: USE (4) 1/2"x2" A325 BOLTS (H0603) & NUTS (H0300) REFERENCE ERECTOR NOTE FOR TYPICAL WASHER REQUIREMENTS

CC1040

Detail Size (W x H): 1 x 1

**Detailer Notes:** 

Revised By: SDF

1) (4) HOLE WELDED CLIP TO COLUMN:

8" - GCM04 12" - GCB12

2) (2) HOLE CLIP WELDED TO HR GIRT:

8" - HCS08 12" - HCS12 3) ADD STIFFENER PER DESIGN TO

(4) HOLE WELDED CLIP TO COLUMN: 8" GIRT: WS 04

12" GIRT: WS\_04

Revised : 01.25.21 (MR2021.02)